

making it happen sooner ...







Joining Collar

Starting Collar

Starting Collar with Volume Control Blade

COLLARS (C)

Airfoil's Joining Collar (JC) is used to join flexible duct in various applications. Manufactured from 0.55 mm galvanised sheet metal to the highest standard, Airfoil's Joining Collar suits all common duct sizes.

Airfoil's Starting Collar (SC) is commonly used where flexible duct is mounted to rigid duct.

Airfoil also offers the Starting Collar with an optionally fitted Volume Control Blade (SCVCB) for balancing air flows during commissioning.

Collar Options

Joining collar, starting collar or starting collar with volume control blade Available in all common duct
sizes, can be manufactured to specifications

Product specification codes:

JC	Joining Collar
SC	Starting Collar
SCVCB	Starting Collar with Volume Control Blade



COLLARS (C)

Product ord	lering codes:
Froduct ord	lering codes.
JC10 JC15 JC20 JC25 JC30 JC35 JC40 JC45 JC50	Joining Collar 100mm diameter Joining Collar 150mm diameter Joining Collar 200mm diameter Joining Collar 250mm diameter Joining Collar 300mm diameter Joining Collar 350mm diameter Joining Collar 400mm diameter Joining Collar 450mm diameter
SC15 SC20 SC25 SC30 SC35 SC40 SC45 SC50	Starting Collar 150mm diameter Starting Collar 200mm diameter Starting Collar 250mm diameter Starting Collar 300mm diameter Starting Collar 350mm diameter Starting Collar 400mm diameter Starting Collar 450mm diameter Starting Collar 500mm diameter
SCVCB15 SCVCB20 SCVCB25 SCVCB30 SCVCB35 SCVCB40 SCVCB45 SCVCB50	Starting Collar with Volume Control Blade 150mm diameter Starting Collar with Volume Control Blade 200mm diameter Starting Collar with Volume Control Blade 250mm diameter Starting Collar with Volume Control Blade 300mm diameter Starting Collar with Volume Control Blade 350mm diameter Starting Collar with Volume Control Blade 400mm diameter Starting Collar with Volume Control Blade 450mm diameter Starting Collar with Volume Control Blade 500mm diameter